BANDAI

⚠ CAUTION !

- Read the instruction sheet carefully.
- Do not give this item to a children who is under the recommended age.
- This product contains small parts such as batteries, battery cover and screws that may cause suffocation if swallowed by children.
- Batteries, battery cover & screws may be swallowed by children. Do not pass this product to children below 3 years old.
- While replacing the dry cell batteries, please ask a guardian for help.
- Do not swallow small parts like batteries, battery cover & screws.
- Swallowing dry cell batteries is extremely dangerous. Please keep batteries away from children.
- Batteries ar
- Do not mix
ensure + &
- Do not rech
- Swallowing
swallowed,
- Avoid rough
- Small parts
- Contents m
- Requires 1

TAMAGOTCHI

© Bandai, WiZ 2004-2008

TAMAWALKIE

TamaWalkie
Instruction Sheet

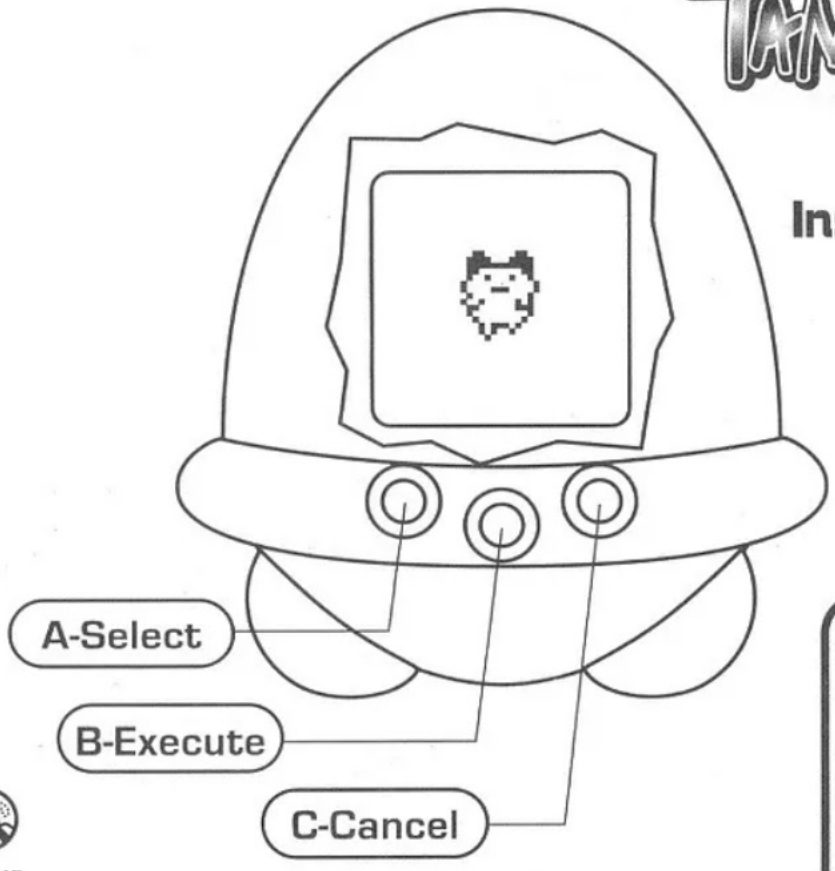

Notice!
- Tamawalkie can not make WEB interaction with tamatown.com.
- Tamawalkie can not make infrared communication with Tamagotchi series.

DO NOT IMMERSE IN WATER

!

are replaced by owners of this product.
x old and new batteries. Do not mix different kinds of batteries. Please
& - at the correct position.
charge, decompose, heat, or dispose of batteries in fire.
g dry cell batteries is extremely dangerous. In case that batteries are
, please go to see a doctor for help.
gh use such as knocking the product or swinging it around.
s may cause harm if swallowed by children.
may vary from photos and illustrations shown on the package.
l CR2032 (3V) battery. Battery included.

⚠ WARN
CHOKING HAZAR
Not for Children under 3

1 **《Background》**
In Tamagotchi Star, Tamagotchis are busy preparing for TAMA & EARTH EXPO（WEB site of V5）. One day, a Tamagotchi went to Earth on errands for collecting the materials of American pavilion. But because of the collision with aerolith, his UFO was pranged? To finish the task with the help of Tamagotchis in America.

Introduction

1. Tamawalkie is a game of the character of Tamagotchi peregrinates in America. This machine attaches with oscillatory input function.

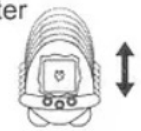

2. Basically peregrinate; but you can speed up by the vehicles (car or skate Board) obtained during your journey.

3. It can be played in both Journey Mode and City Mode.
4. With the points (miles) won in the game, you can buy food, drink, vehicles and fuel.

5. You can travel in 25 cities of America, and when you reach a city or region, the tourist attractions in that city or region will be displayed.

How to start your journey

1. Pull out the tab from the bottom of the casing and Tamawalkie will appear after a long beep.
2. To reset, press the reset button on the back of the casing with a pointed object like a pen. *Note: Be careful not to apply too much pressure , especially with a sharp object.*

3. How to select your character
Please select your character with button (A), and confirm with button (B).

●Start opening animation.

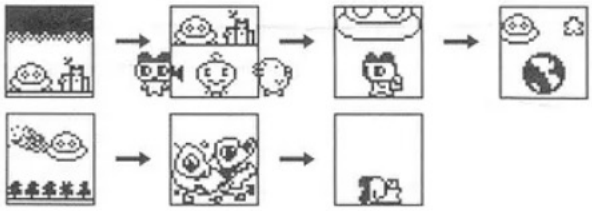

Route on the way

Start your "Looking for UFO parts journey" in 25 cities of America based on the starting point. The starting city is decided randomly in Map 1 or Map 4.

The Map is divided into 4 parts as follow, and to be magnified to display.

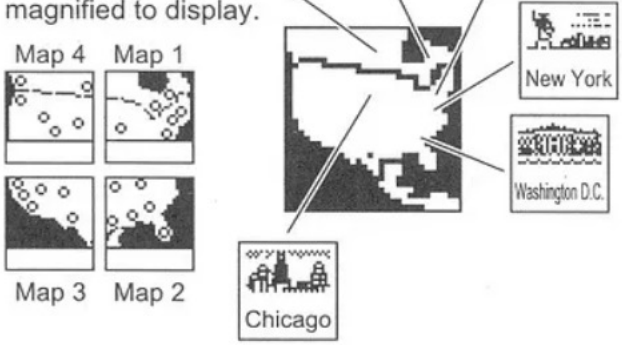

NING:
RD - Small parts.
3 years.

Check us out at
www.bandai-asia.com

Manufactured by
BANDAI
BANDAI ASIA CO., LTD.
Unit 3018, Tower 1, Admiralty Centre,
18 Harcourt Road, Hong Kong.

2 Basic modes

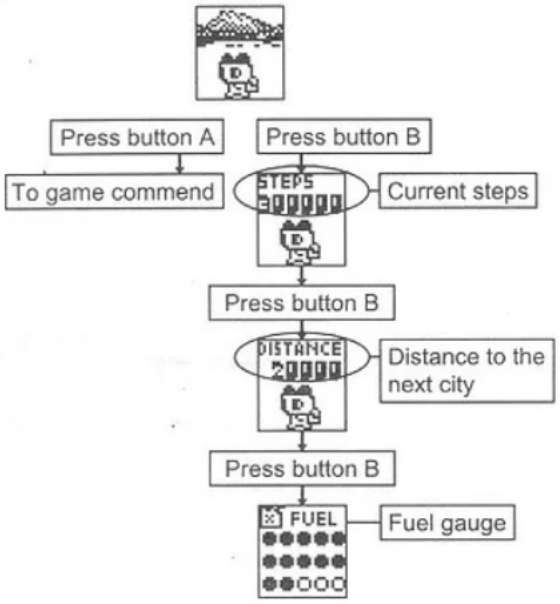

Game command

STATES : Select the "States" with Button (A) and confirm with Button (B) to check the following information regarding your Tamagotchi character.

●Level of HUNGER/HAPPINESS :
The number of hearts you have indicates your Tamagotchi hunger and happiness. (The more the Better).

●Mile point :
This is mile point added in walking and the game, etc.

●Steps / Distance :
Show your current Steps and Distance at the same time.
*Diatance is displayed as "?"

MEAL :
Press button (A) to select the MEAL icon and choose from a variety of meals or snacks.
**NOTE : Not to eat too much. Otherwise...*

VEHICLE :
You can select a vehicle you want to use according to VEHICLE command.
There is no vehicle at the Beginning of your journey; But you can obtain during your journey, and the decreasing speed of Distance will change.
**NOTE: Vehicle needs fuel. If the fuel runs out or the vehicle*

GAMES :
At the beginning, there are only 4 games.
Press button (A) to select the "GAME" icon and press button (B) to choose a game to play. If you succeed in the game, your MILE POINT will be increased.

●JUMPING ROPE :

Use (A) (B) (C) Buttons or oscillatory input function.

●TIMER :

★COUNT DOWN

It is a game uses Stop Watch. Count down from 10"00, and you will success if you press buttons before 00"00. Press button (A) to select COUNT DOWN and press button (B) to confirm. Please press button (B) before it becomes 00"00.

★STOP WATCH

It is a stop watch that can be measured 5"00.
*It is not a game.

●TREADMILL :

The character is running on the running machine, but backs off gradually. When the character calls for help, double press any button or with oscillatory input function to reset it.

●FISHING :

Please seizing the opportunity to catch the fish with oscillatory input function.
* Button B are Effective.

MAP :

Show the whole America and current position.

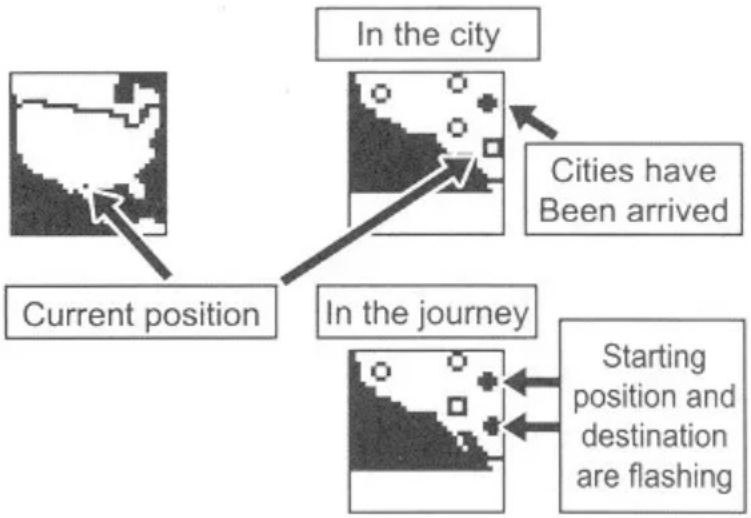

ITEM :

You can check the status of SOUVENIR and UFO parts that you have collected.
Select with Button (A) and confirm with Button (B).

Souvenir No.

Souvenir name

Cities that you get Souvenir

Photo

Status of no part has been collected

Status of 1~6 parts have been collected

Status of 7~11 parts have been collected

Status of all parts have been collected

NOTE : When items are full...
When items are full, ITEM FULL will appear. Select with button (B) to delete the items that you don't want to keep.

*Bread and Muffin can not be deleted.

Game modes

During the journey

When you walking in the street, you will see various shops and come across various events.

1. Food shop
You can buy one of the two kinds of goods with MILE POINT.

2. Petrol station
You can only buy one kind of fuel for your vehicle. ?In different cities, the prices of fuel are different.

3. JOBS
You are asked to help other people when you're walking in the street. If you help them solve their problems, you'll gain MAIL POINT.

JOB 1 : Corn field
To harvest the corn by using oscillatory input function.

JOB 2 : Fruit farm
To harvest the fruits by using oscillatory input function.

JOB 3 : Dairy farming
To milk by using oscillatory input function.

JOB 4 : Dig out fossils
To dig out fossils by using oscillatory input function.

4. No thoroughfare
When the mark of "No thoroughfare" appears during your walking, you must return.

In the city

The entrance of the city will appear only when all the conditions are clear.
NOTE : You can only walk in the city. Vehicle can not be available.

1. Welcome event
When Distance is 0, all the residents will welcome you. In addition, there are possibilities to find UFO parts and gain bonus MILE POINT.
NOTE : The less of steps of arriving, the more of MILE POINT are gained.

2. SHOP
When you are walking in the street, you will see various shops and come across various events.

●Food shop
You can buy four goods with MILE POINT at the same time.

●Vehicle shop
Vehicles are sold in here.

●**Petrol station**
Provide fuel for vehicles. You can buy fuel with MILE POINT. The prices of fuel are different in different cities.

●**Repair shop**
You can repair the broken items here. In different cities, the prices of repairing are different.

3. JOBS

JOB 5 : Clean the window
To clean the window by using oscillatory input function.

JOB 6 : Wash the car
To wash the car by using oscillatory input function.

4. Tourist attractions

When the character is calling for sightseeing, you can go to the tourist attractions by pressing button (B). You can buy souvenirs and take photos.

SOUND ON/OFF

Press and hold buttons (A) and (C) together. Select sound ON or OFF.

HOW TO REPLACE BATTERY

Requires 1 CR-2032 3V battery. Using a small screwdriver, turn the screw counter clockwise to loosen. Remove back as shown, and remove the old battery. Insert the new battery as shown.

NOTE : Make sure you use a new battery.

NOTE : You will NOT need to change the batteries before using your Tamagotchi for the first time.